



## SLIMWALL Mouldings Hanging instructions

### General conditions

- Check that the product delivered matches the order (reference, length, batch number, colour) and that it has not been damaged during shipment (if this is the case put a proviso on the carrier's delivery note)
- D.T.U 59.4 « Mise en oeuvre des papiers peints et revêtements muraux » edited by AFNOR according to standards NF P 74 -204 -1&2 sets out the rules for hanging of wallcoverings and theresponsibility of the installer. It will be used in case of a dispute
- Recommended conditions :  
+10 °C < Temperature > +30 °C  
Humidity < 65 %HR

### Prepare the walls

The installer is responsible for preparing the walls  
**A WELL-PREPARED BASE = 80% OF THE SUCCESS**

- The base (walls) must be:

**Robust** : the wall must be strong, stable and hard.

**Sound and dry** : humidity treated , saltpetre and mould removed.

**Clean** : remove dust, previous wallcoverings, and wash.

**Smooth and flat** : to ensure a beautiful finish.

**Uniform** : to avoid show through.

- Normally absorbent (water drop test), otherwise :

For new substrates which are too absorbent (plaster, render, plasterboard, concrete) should be primed using a thin layer of Metylan I200 or diluted acrylic paint.

Old soft crumbling plaster should be treated with Metylan I 400 hardener or diluted glycerophthalic primer diluted with 20 to 30 % white spirit.

Old non-absorbent walls (varnish or old paint in perfect condition) should be washed with alkaline and rinsed.

### Choice of paste

- On normally absorbent substrates : OVALIT TM, brand Metylan, manufactured by HENKEL  
Apply with a medium nap roller such as a 12mm polyamide roller or with a spatula. Apply generously upto +/- 250 g/m<sup>2</sup>
- On non-absorbent substrates :  
OVALIT F (+/- 250 to 300 g/m<sup>2</sup>)
- Adhesive suitable for skirting boards and picture rails (acrylic mastic)

### Recommendation

- Skirting boards with a 9mm recess to accommodate the product (sold by Texdecor)
- Skirting boards in the case of a basement
- Raw SlimPanel sheet


### Specificity

Socket installation:


It is recommended to install a projecting socket. If the cut-out is made in a recess, glue a flat sheet of maximum 4.5 mm thickness in the recess next to the socket.

### Tools


Spirit level and square

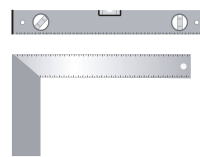


Pasting roller or spatula

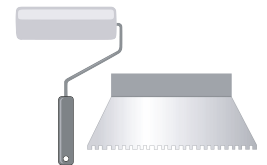


Cutter with snap-off blades

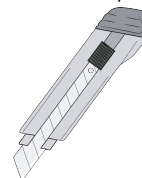

Jigsaw

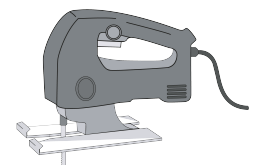

Circular saw for aluminium

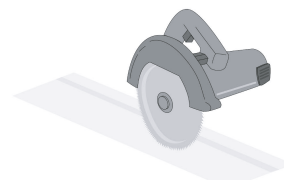

1. Paint the skirtings and picture rails.


2. Install the bottom skirting.

3. Insert the panels into the skirting.


### As a base panel :



Install the SlimWall skirting

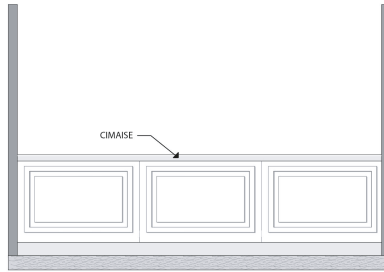


Install the finishing rail.

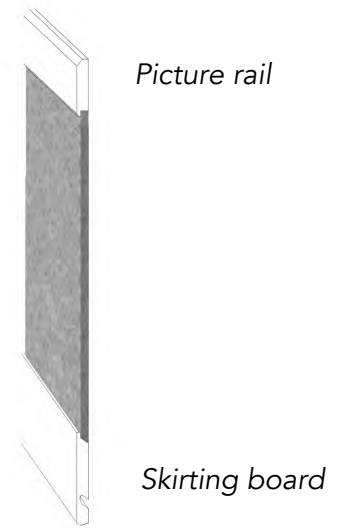


### Allover :







Install the SlimWall skirting

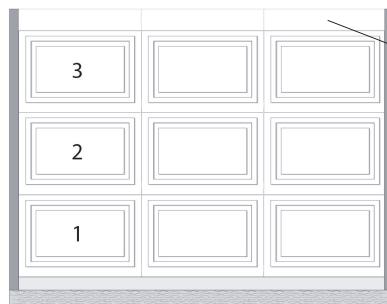

Hang a plain SlimWall panel to be cut with a cutter or circular saw.

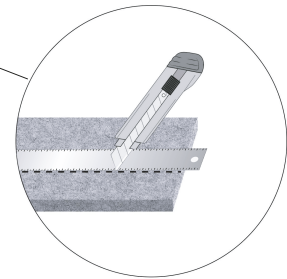

### Placement :

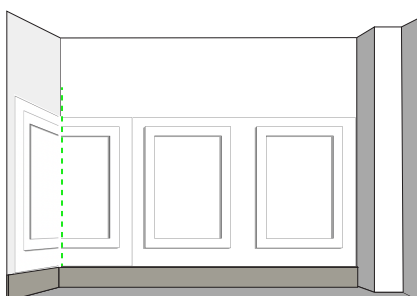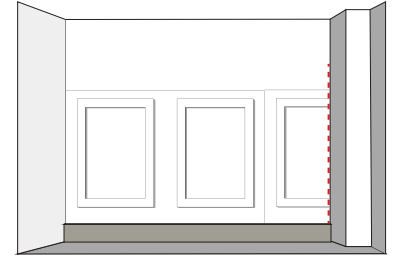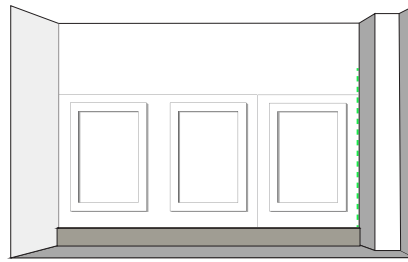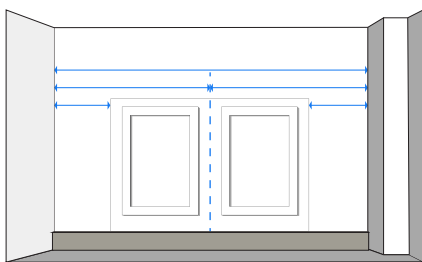

Bevel cut in the corner



### Technical enquiries

• In case you require assistance to start the work or for any additional information, the Texdecor team is available on

**Tel 03.20.61.78.37**

• All the technical documents and regulations (DoP, technical data, hanging instructions, fire-rating...) can be found on the website

**www.texdecor.com**

Texdecor, 2 rue d'Hem, 59780 Willems. France



Demonstration video



## SLIMWALL Wall Panelling Hanging instructions

### General conditions

- Check that the product delivered matches the order (reference, length, batch number, colour) and that it has not been damaged during shipment (if this is the case put a proviso on the carrier's delivery note)
- D.T.U 59.4 « Mise en oeuvre des papiers peints et revêtements muraux » edited by AFNOR according to standards NF P 74 -204 -1&2 sets out the rules for hanging of wallcoverings and the responsibility of the installer. It will be used in case of a dispute
- Recommended conditions :
  - +10 °C < Temperature > +30 °C
  - Humidity < 65 %HR

### Prepare the walls

The installer is responsible for preparing the walls  
**A WELL-PREPARED BASE = 80% OF THE SUCCESS**

- The base (walls) must be:

**Robust** : the wall must be strong, stable and hard.  
**Sound and dry** : humidity treated , saltpetre and mould removed.  
**Clean** : remove dust, previous wallcoverings, and wash.  
**Smooth and flat** : to ensure a beautiful finish.  
**Uniform** : to avoid show through.

- Normally absorbent (water drop test), otherwise :

For new substrates which are too absorbent (plaster, render, plasterboard, concrete) should be primed using a thin layer of Metylan I200 or diluted acrylic paint.  
Old soft crumbling plaster should be treated with Metylan I 400 hardener or diluted glycerophthalic primer diluted with 20 to 30 % white spirit.  
Old non-absorbent walls (varnish or old paint in perfect condition) should be washed with alkaline and rinsed.

### Choice of paste

- On normally absorbent substrates : OVALIT TM, brand Metylan, manufactured by HENKEL  
Apply with a medium nap roller such as a 12mm polyamide roller or with a spatula. Apply generously upto +/- 250 g/m<sup>2</sup>
- On non-absorbent substrates :  
OVALIT F (+/- 250 to 300 g/m<sup>2</sup>)
- Brand Metylan, manufactured by HENKEL, apply with a foam CREPI FIN (plaster) roller

### Recommendation


- - Skirting boards (sold by Texdecor)
- 18x18mm battens for installation on adjacent walls (not supplied)

### Specificity


- Socket installation: It is recommended to install a socket in a recess. If the cut-out is made in a recess, glue a flat sheet of maximum 4.5 mm thickness in the recess next to the socket.

### Tools


Spirit level and square

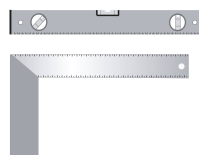


Pasting roller or spatula

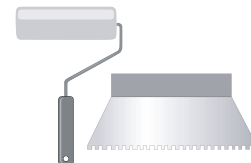


Cutter with snap-off blades

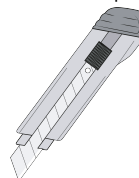


Jigsaw

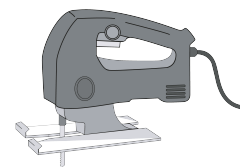

Circular saw for aluminium

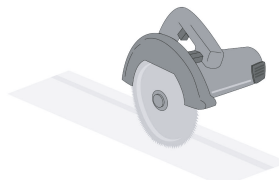



1. Lay the skirting and then the strip in the corner if necessary. Start the installation at a lower corner. To do this, cut off the edge

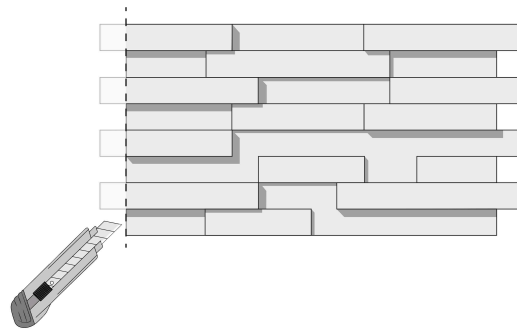


Keep the offcuts of the first panel. They can be used to complete the final panel.

2. Hang the first panel, then the second inverting the direction. Hang the rest keeping to the same system until you reach the end. Trim the edge and check with a spirit-level.

3. Use the final offcut to start a new layer then repeat steps 2 and 3 as many times as necessary to cover the surface.

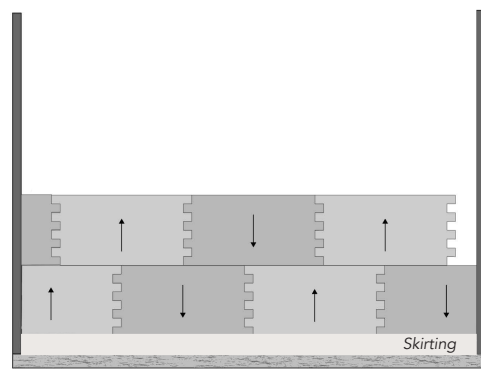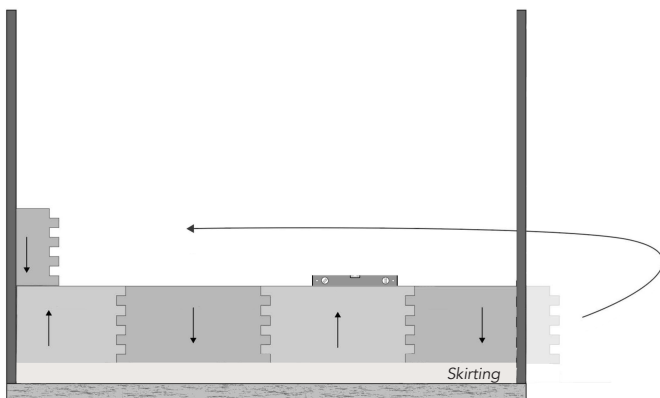

-Precision for London : In order to respect the aesthetics, include a **distance of 10 cm**.

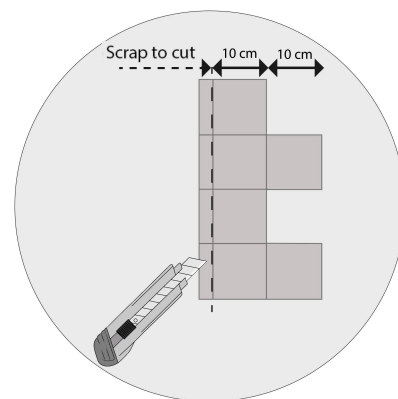

### Technical enquiries

• In case you require assistance to start the work or for any additional information, the Texdecor team is available on

**Tel 03.20.61.78.37**

• All the technical documents and regulations (DoP, technical data, hanging instructions, fire-rating...) can be found on the website

**www.texdecor.com**

Texdecor, 2 rue d'Hem, 59780 Willems. France



Demonstration video